


HOW TO DISCONNECT SNIB HOLDBACK FACILITY

1. Hold back body of Lock in horizontal position, remove 4 silver screws and lift off the cover plate.

2. Take out the ballbearing, spring and small top plate only.

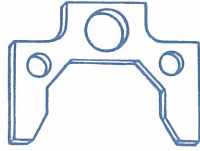

3. Replace the cover and secure with the 4 silver screws.