



BEFORE INSTALLING THE DIGITAL DOOR LOCK, 7070N

CONFIRM THE HAND OF OPENING

The lock comes factory set for right hand opening, if your door is hinged on the right from the entry side then proceed to how to install after installing the support pin as per below. if your door is hinged on the left from the entry side then follow changing the hand of opening to left hand.

CHANGING THE HAND OF OPENING TO LEFT HAND

- move the screw (1) into position (2)
- remove the two screws (3) from the inside of the handle releasing the handle cover.
- remove the two screws (4) that connect the handle to the lock, lift the handle off and reverse it to left hand. replace all screws securely.
- repeat the same with the inside handle.
- on the entry side of the lock either side of the spindle cog there are two holes (a,b), screw support pin into the following position for r/h opening and the opposite position for l/h opening.

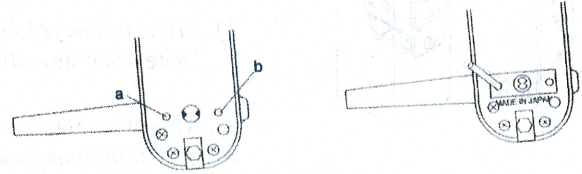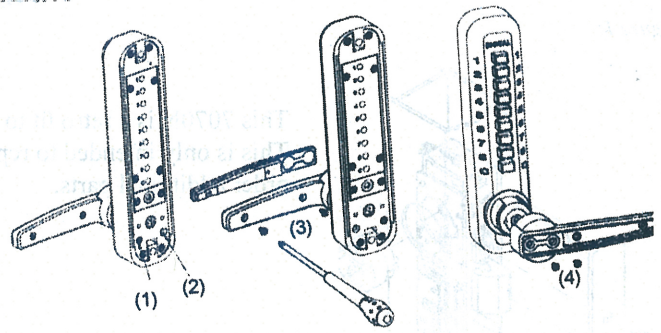

for right hand

HOW TO CHANGE THE CODE NUMBER

TO PREVENT ANY PROBLEMS OR DAMAGE, READ THE FOLLOWING INSTRUCTIONS BEFORE CHANGING YOUR CODE

Hold the front lock body in the horizontal position. remove the 4 red screws and take the lid off carefully

note: there are 9 springs in the back of the lid.

the code tumbler

the green coloured are the tumblers for 'double pushing'

the red coloured are the tumblers for 'single pushing'



the blue coloured are keyless tumblers 'non-code'

the plain tumbler is the 'c' button (to clear) never remove this tumbler

for example this "code number" is made up of the "c: to clear then 22478

whilst pushing in the 'c' button, and using the tweezers provided, place you code tumblers into position

green in hole no. 2 red in hole's no. 4, 7 & 8 blue in the remaining

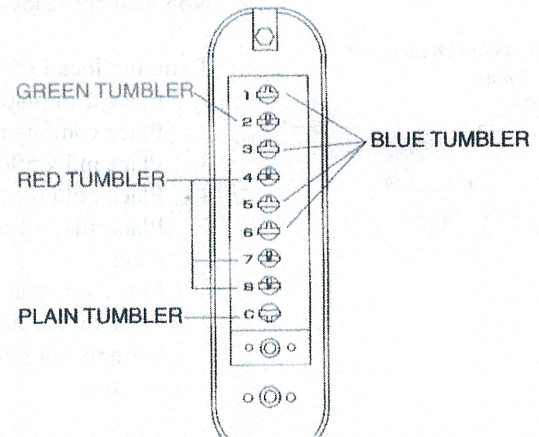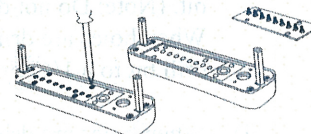

HOW TO CHANGE THE CODE NUMBER

to increase and decrease the number of digits used in your code add more red and green to increase, add more blue to decrease.

its is very important to replace the code tumblers in the correct way.

the colored top end must always face upwards.

the side of the tumbler that has the raised notches must face toward the top of the lock.

remember to keep the 'c' pressed in while removing and replacing the tumblers.

replace the plate carefully and now test your code before replacing it on the door.

