
Digital Door Lock How to Change the Code




Failure to follow the instructions could result in damage to your lock, so please read carefully.

- Hold the outside body in the horizontal position. Remove the 2 red screws. Carefully remove the plate, as there are many springs attached to it.
- 2) Important: You must turn the knob to the clear position and hold in that position until you have completed the code change. By not holding the knob in the clear position, you could damage the lock and void the warranty.

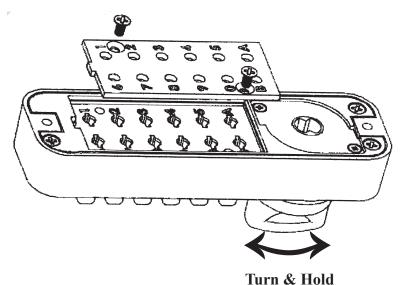

3) There are BLUE (non-code) and RED (code) tumblers. Your code is made up of red tumblers always prefixed by turning knob to clear.

While continuing to hold knob in clear position, use tweezers to lift out code/non-code tumblers you wish to change.

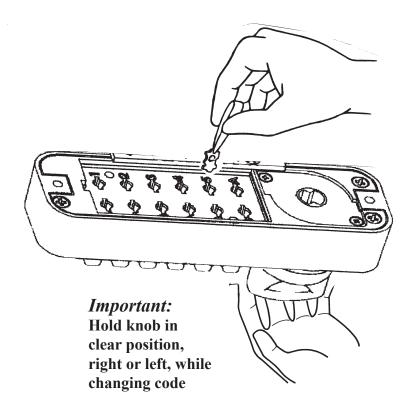

Important: Hold knob in clear position, right or left, while changing code.


Red

Code

Blue

Non-Code

4) Replacing code and non-code tumblers.

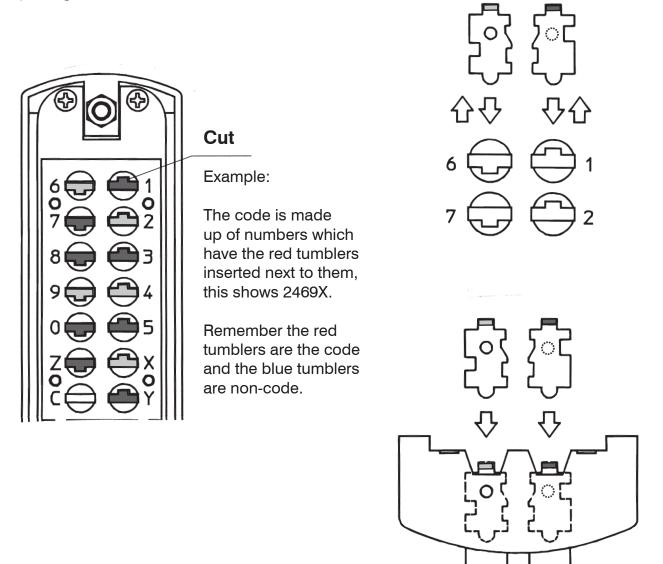

While holding knob in clear position make sure the blue or red colored end of the tumbler is facing upwards. Make sure notch is placed in the correct insert of the tumbler slot. See example.

Using the tumblers provided you can change your code from a 2-digit code to a 5-digit code. If more red or blue tumblers are needed, you can request a tumbler kit by sending \$4.00 to Lockey Systems, P.O. Box 543, Mt. Pleasant, MI 48804. You will be sent 2 Red and 4 Blue tumblers.

To **increase** the code, remove blue tumblers and replace with red tumblers.

To **decrease** the code, remove red tumblers and replace with blue tumblers.

IMPORTANT: It is imperative that the tumblers are inserted with the red or blue color side up.

5) When you have completed changing the code, carefully replace cover, making sure all springs are in place. Replace 2 red screws. Turn knob to clear, and test code.

Always test your new code before installing, and always test on door before locking.