


CONT' HOW TO INSTALL THE DIGITAL DOOR LOCK, "SUPER-8"


Making sure the spindle is the correct length according to the door thickness (if spindle is too long it will cause the lock to bind, if it is too short it will not engage the lock mechanism). Insert it into the spindle hole of the front body and through the spindle hole in the latch bolt from the inside of the door.

Break the spindle according to the door thickness.

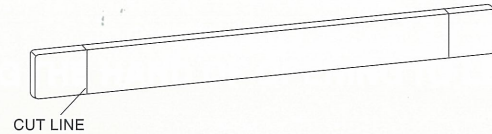

After placing the escutcheon to the inside body, fit the inside body over the spindle.

Fasten the inside body with the supplied correct length machine screws

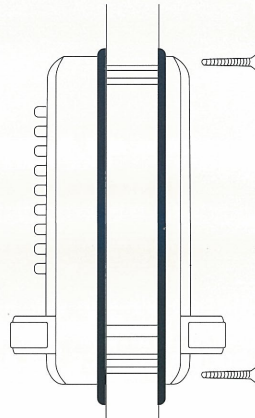

Before closing the door test your lock from the inside and out side to ensure it is set correctly.

AFTER CONFIRMING THE ABOVE

Close the door and decide on the position where the latch bolt head touches the face of the door jamb. And mark the hole for the mortise strike. After that, chisel out the space for the magnetic strike box. Fasten them with the wood screws.

