

IV HOW TO USE THE DIGITAL DOOR LOCK, "SUPER-8"

1. When the door is closed, the "SUPER-8" locks automatically.
2. From the inside, unlock using the lever handle.
3. From the outside, unlock by pressing the correct code and then using the lever handle.

"HOLDBACK" DEVICE

The holdback holds the latch bolt head back; this is very convenient. When using the code is not always necessary.

TO OPERATE


Pull the inside handle down until the latch bolt head retracts fully, and push the holdback down.

To restore push up the holdback.

V HOW TO CHANGE THE CODE NUMBER

TO PREVENT ANY PROBLEMS OR DAMAGE, READ THE FOLLOWING INSTRUCTIONS BEFORE CHANGING YOUR CODE

Hold the front lock body in the horizontal position.
Remove the 4 red screws and take the lid off carefully.

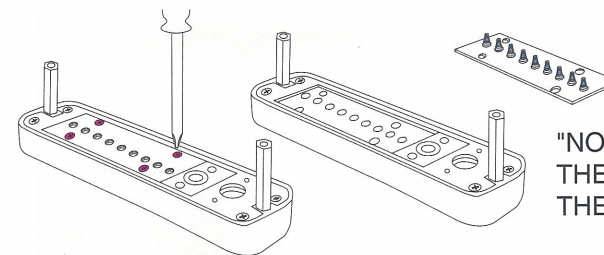

"NOTE
THERE ARE 9 SPRINGS IN THE BACK OF THE LID.

THE CODE TUMBLER

THE GREEN COLOURED ARE THE TUMBLERS FOR 'DOUBLE PUSHING'

THE RED COLOURED ARE THE TUMBLERS FOR 'SINGLE PUSHING'

THE BLUE COLOURED ARE KEYLESS TUMBLERS 'NON-CODE'

THE PLAIN TUMBLER IS THE 'C' BUTTON (TO CLEAR) NEVER REMOVE THIS TUMBLER

FOR EXAMPLE THIS "CODE NUMBER" IS MADE UP OF THE "C" TO CLEAR THEN 22478

WHILST PUSHING IN THE 'C' BUTTON, AND USING THE TWEEZERS PROVIDED, PLACE YOUR CODE TUMBLERS INTO POSITION

GREEN IN HOLE NO.2 RED
IN HOLE'S NO.4,7&8
BLUE IN THE REMAINING

